

Fitting Instruction

Part-No.: 118Y129

Product: Rear Set, adjustable

Brand: Yamaha

Model (Type) : **MT-09 (RN29)** 2014→

Important:

Read this instruction manual carefully and mind all warnings and tips. You should do this work only if you're qualified; otherwise we recommend this mounting to be done by a qualified workshop. Improperly mounting of this kit can reduce the driveability of the motorcycle and may be a risk to your health and life. Test brake and gear shifting indoor, after installing rear set. If anything is not operating properly or braking efficiency is poor, testing on the road may result in death or serious injury!

Special works are marked with the following signs. Please take special care on these works.



Warning! Important mounting instruction. It shows risks to your life and health.



Tips for mounting and maintenance or to avoid damage.

Advises for demounting and mounting the swing-arm axle:

Before you start, park your motorbike on a solid, even surface.



Firm up the vehicle so it won't topple over!

Demount rear wheel first and remove swing-arm axle afterwards.

Fitting:

Remove stock rear sets. The following parts will be used for your new rear set: brake cylinder with reservoir.



Rear sets are delivered pre-assembled! All fastening elements, which are not used for mounting or adjusting the rear set, are fitted with tightening torque and bolt adhesive. Those fastening elements are not mentioned in this instruction. All mentioned fasteners, which are not secured by counter- or self-locking nuts, should be installed with medium bolt adhesive (e.g. Loctite 243).



The original brake-light switch has to be replaced by a hydraulic one. It replaces the banjo bolt that fixes the brake hose on the brake cylinder. Follow the vehicle manufacturer's instruction for bleeding the brake system! Use only seal rings according to the brake hose manufactures' instructions. Please mind that additional work occurs by connecting the brakelight switch to the harness and some material for wiring and connecting may be necessary.




If the lower and foremost position of the adjusting range shall be used on the left side it's necessary to make a small recess into the sprocket cover.

The tightening torques for connections to the frame refers to the manufacturer's instructions. Use the following torques for all the other bolted connections:


M5	=	6Nm	=	4.43lbf ft
M6	=	10Nm	=	7.38lbf ft
M8	=	20Nm	=	14.75lbf ft
M10x1,25	=	30Nm	=	22.13lbf ft

Accessories from LST — The Original Rev. 00 06/02/2014 Page 1 of 3

Fitting left:

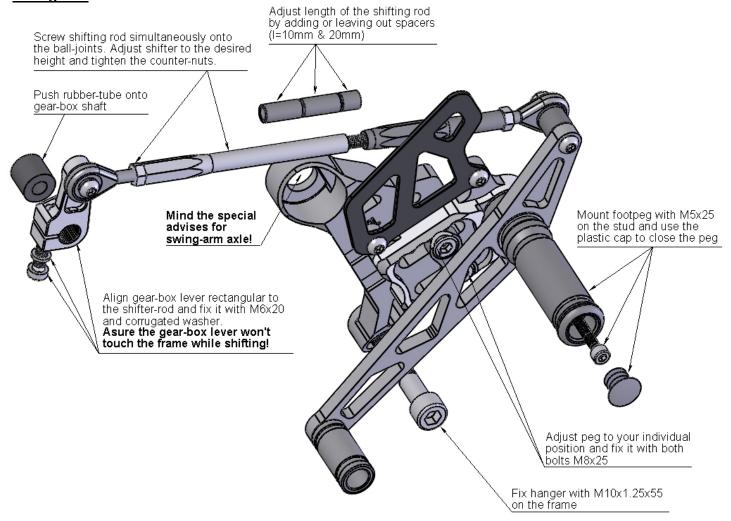


Fitting right (step 1):

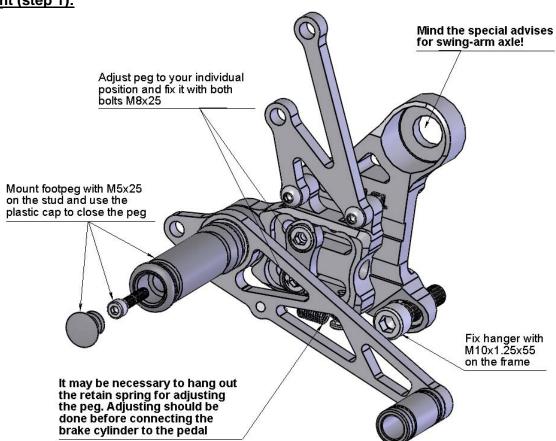

Accessories from LST — The Original ——
Rev. 00 06/02/2014 Page 2 of 3

Fitting right (step 2):

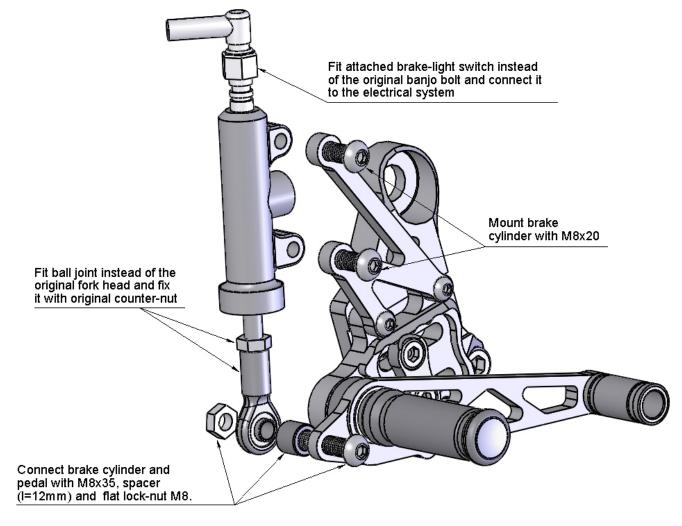

Maintenance:

(i)

Periodically proof all functions during service intervals. Use **particle free (no MoS₂)** lithium or barium soap grease to maintain lever bushings.

Accessories from LSL — The Original

Rev. 00 06/02/2014 Page 3 of 3



LSL-Motorradtechnik GmbH • D-47809 Krefeld www.lsl.eu