

# MONTAGEANLEITUNG

## RA60-22H20, RA60-22H30, RA60-22H40 & RA60-22H50

Für Fahrzeuge mit 22 mm (22,2) Lenker und einem Bohrungsabstand von 32 – 40 mm.

## RA60-28H20, RA60-28H30, RA60-28H40 & RA60-28H50

Für Fahrzeuge mit 28 mm (28,6) Lenker und einem Bohrungsabstand von 37 – 46 mm.

## RA60-32H25 & RA60-32H40

Für Fahrzeuge mit 32 mm (32,2) Lenker und einem Bohrungsabstand von 41 – 46 mm.

### 1. Demontage

Entfernen Sie die obere Lenkerklemme.

### 2. Montage

Setzen Sie den Riser unter dem Lenker auf die Lenkeraufnahme, wie auf dem Bild rechts zu sehen. Richten Sie den Lenker aus und fixieren ihn von oben mit der mitgelieferten Lenkerklemme des Risers. Verwenden Sie die Schrauben aus dem Lieferumfang und beachten Sie das maximale Drehmoment von 23 Nm.

### ACHTUNG!!!

**Universelles Bauteil! Kontrollieren Sie nach der Montage unbedingt die Freigängigkeit der Bremsleitung, der Kupplungszug/-leitung, elektrische Verbindungen und Funktion des Lenkradschlosses. Auch bei vollem Lenkereinschlag dürfen Kabel weder spannen noch scheuern.**



# INSTRUCTION MANUAL

## RA60-22H20, RA60-22H30, RA60-22H40 & RA60-22H50

For Vehicles with 22 mm (22,2) handlebar and hole distance of 32 – 40 mm.

## RA60-28H20, RA60-28H30, RA60-28H40 & RA60-28H50

For Vehicles with 28 mm (28,6) handlebar and hole distance of 37 – 46 mm.

## RA60-32H25 & RA60-32H40

For Vehicles with 32 mm (32,2) handlebar and hole distance of 41 – 46 mm.

### 1. removing


Remove the upper handlebar clamp.

### 2. mounting

Place the riser under the handlebar on the handlebar mount as shown in the picture on the right. Align the handlebars and fix them from above with the supplied handlebar clamp of the riser. Use the bolts supplied and observe the maximum torque of 23 Nm.

### ATTENTION!!!

**Universal component! After assembly, make sure to check the free brake line, clutch cable/-line, electrical connections and function of the steering wheel lock. Even with the handlebars fully turned, cables must neither tension nor chafe.**

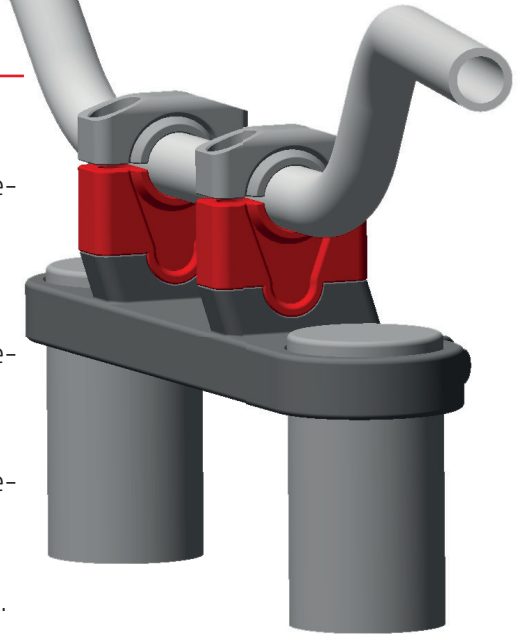

### Lieferumfang/ Scope of delivery

RA60-22H20 – M8 x 50	RA60-22H40 – M8 x 65	RA60-28H40 – M8 x 70
RA60-22H30 – M8 x 55	RA60-22H50 – M8 x 75	RA60-28H50 – M8 x 80
	RA60-28H20 – M8 x 50	RA60-32H25 – M8 x 55
	RA60-28H30 – M8 x 60	RA60-32H40 – M8 x 70