

MOTOPLASTIC, S.A.

Molí de la sal, 1 - 08403 Granollers (Barcelona) SPAIN

Tel. 34 93 849 06 33 - Fax 34 93 849 09 88

info@puig.tv




www.puig.tv

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS

GUARDABARROS TRASERO ADAPTABLE A - REAR MUDGUARD ADAPTABLE TO
BMW R1200 GS '05-'10 R1200 GS ADVENTURE '07-'10





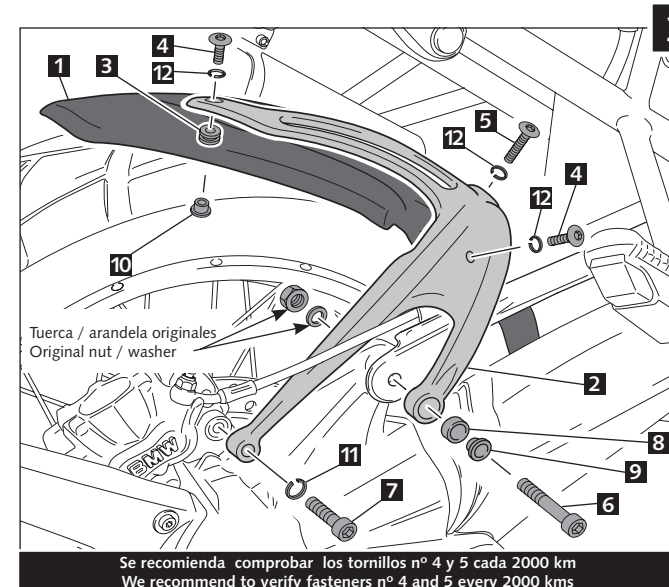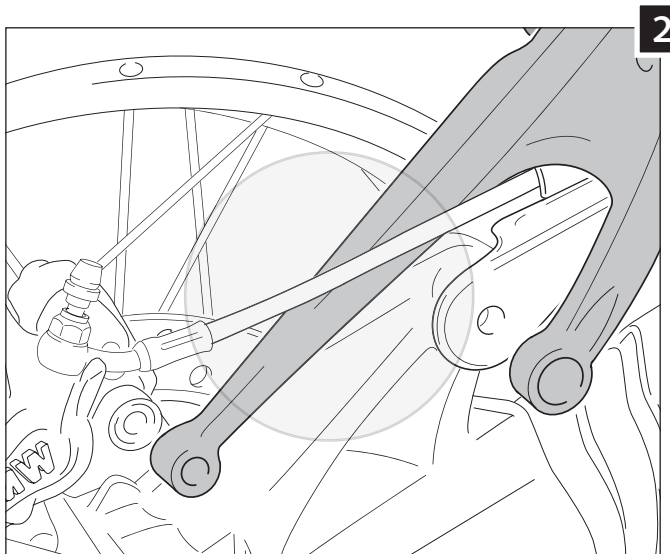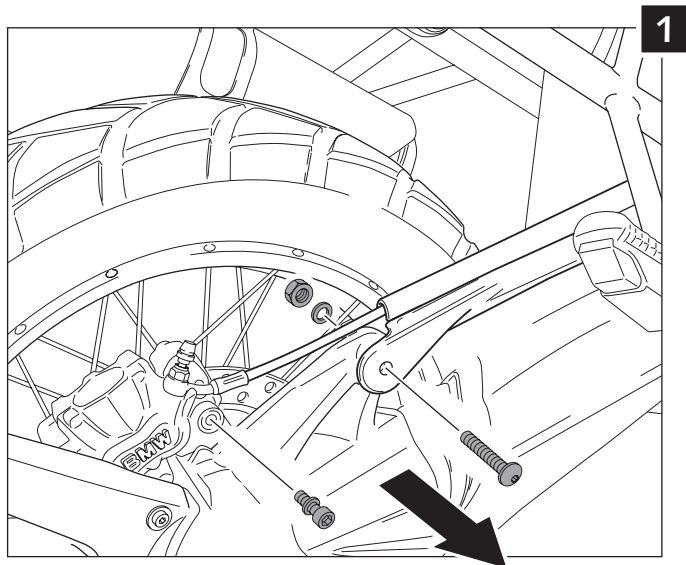







Ref.: 5055 N
 (color negro/black colour)

Ref.: 5055 C
 (color carbono/carbon look)



Se recomienda comprobar los tornillos nº 4 y 5 cada 2000 km
 We recommend to verify fasteners nº 4 and 5 every 2000 kms



ID.	DESCRIPCIÓN	DESCRIPTION	QTY.
1	 Guardabarros	Mudguard	1
2	 Soporte	Support	1
3	 Silemblock	Well nut	3
4	 Tornillo Allen M5x11 ISO 7380	M5x11 ISO 7380 Allen screw	2
5	 Tornillo Allen M5x16 ISO 7380	M5x16 ISO 7380 Allen screw	1
6	 Tornillo Allen M10x75 DIN 912	M10x75 DIN 912 Allen screw	1
7	 Tornillo Allen M8x40 DIN 912	M8x40 DIN 912 Allen screw	1
8	 Casquillo de fricción IGUS Ø int. 15 x Ø ext. 17x15	Arrowhead friction IGUS Ø inner 15 x Ø outer 17x15	1
9	 Casquillo con valona Ø int. 10,5 x Ø ext. 15,1x17,5	Bush with flange Ø inner 10,5 x Ø outer 15,1x 17,5	1
10	 Casquillo con valona M5	M5 bush with flange	3
11	 Arandela glower M8	M8 glower washer	1
12	 Arandela glower DIN 127 M5	DIN 127 M5 glower washer	3