


Important: If you are not a trained motorcycle mechanic stop now. Ask a local motorcycle shop to do the work for you.


Please take extra care!

You have to mount the crash-pads one side after the other! Do not loose more then one engine mounting bolt at the same time!
The cowling remains unmodified!

Fitting of the right side:

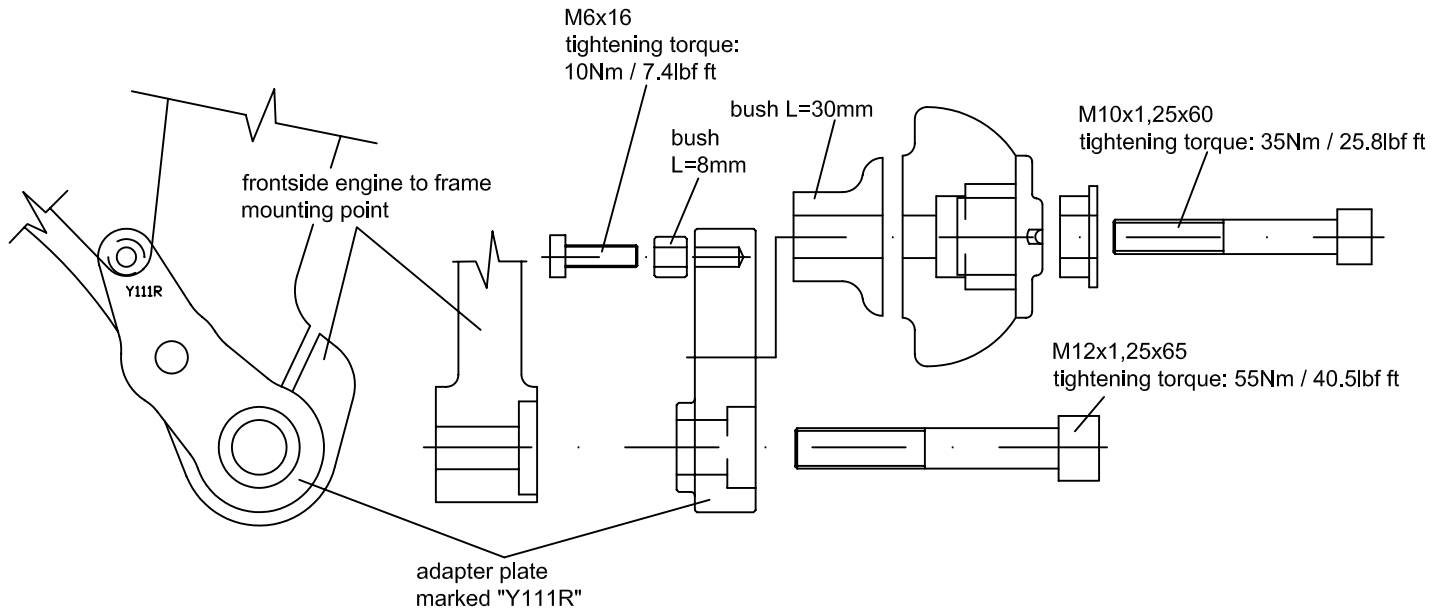

Fitting of the left side:

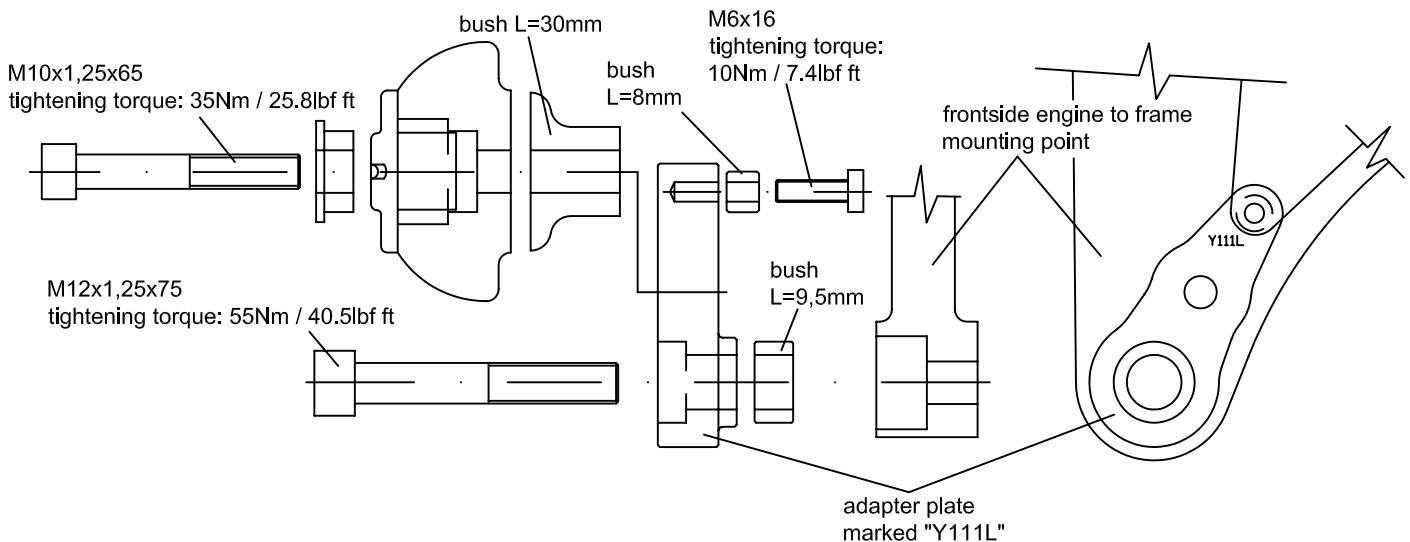

LSL-Motorradtechnik GmbH • D-47809 Krefeld

www.lsl.eu

Stand: 25.05.2007

