

**GIVI**

**art. E111**

SCHIENALINO  
BACKREST  
DOSSÈRET  
BEIFahrER-RÜCKENLEHNE  
RESPALDO

ISTRUZIONI DI MONTAGGIO - MOUNTING INSTRUCTIONS  
INSTRUCIONS DE MONTAGE  
BAUENLEITUNG - INSTRUCCIONES DE MONTAJE

1

SCHIENALINO  
BACKREST  
DOSSÈRET  
BEIFahrER-RÜCKENLEHNE  
RESPALDO

Q.TY n.1

2


VITE TL M6x20mm  
SCREW M6x20mm  
VIS M6x20mm  
SCHRAUBE M6x20mm  
TORNILLO M6x20mm

Q.TY n.2

3

RONDELLA IN GOMMA  
Z967  
RUBBER WASHER  
RONDELLE EN CAOUTCHOUC  
GUMMI SCHEIBE  
ARANDELA DE GOMA

Q.TY n.2

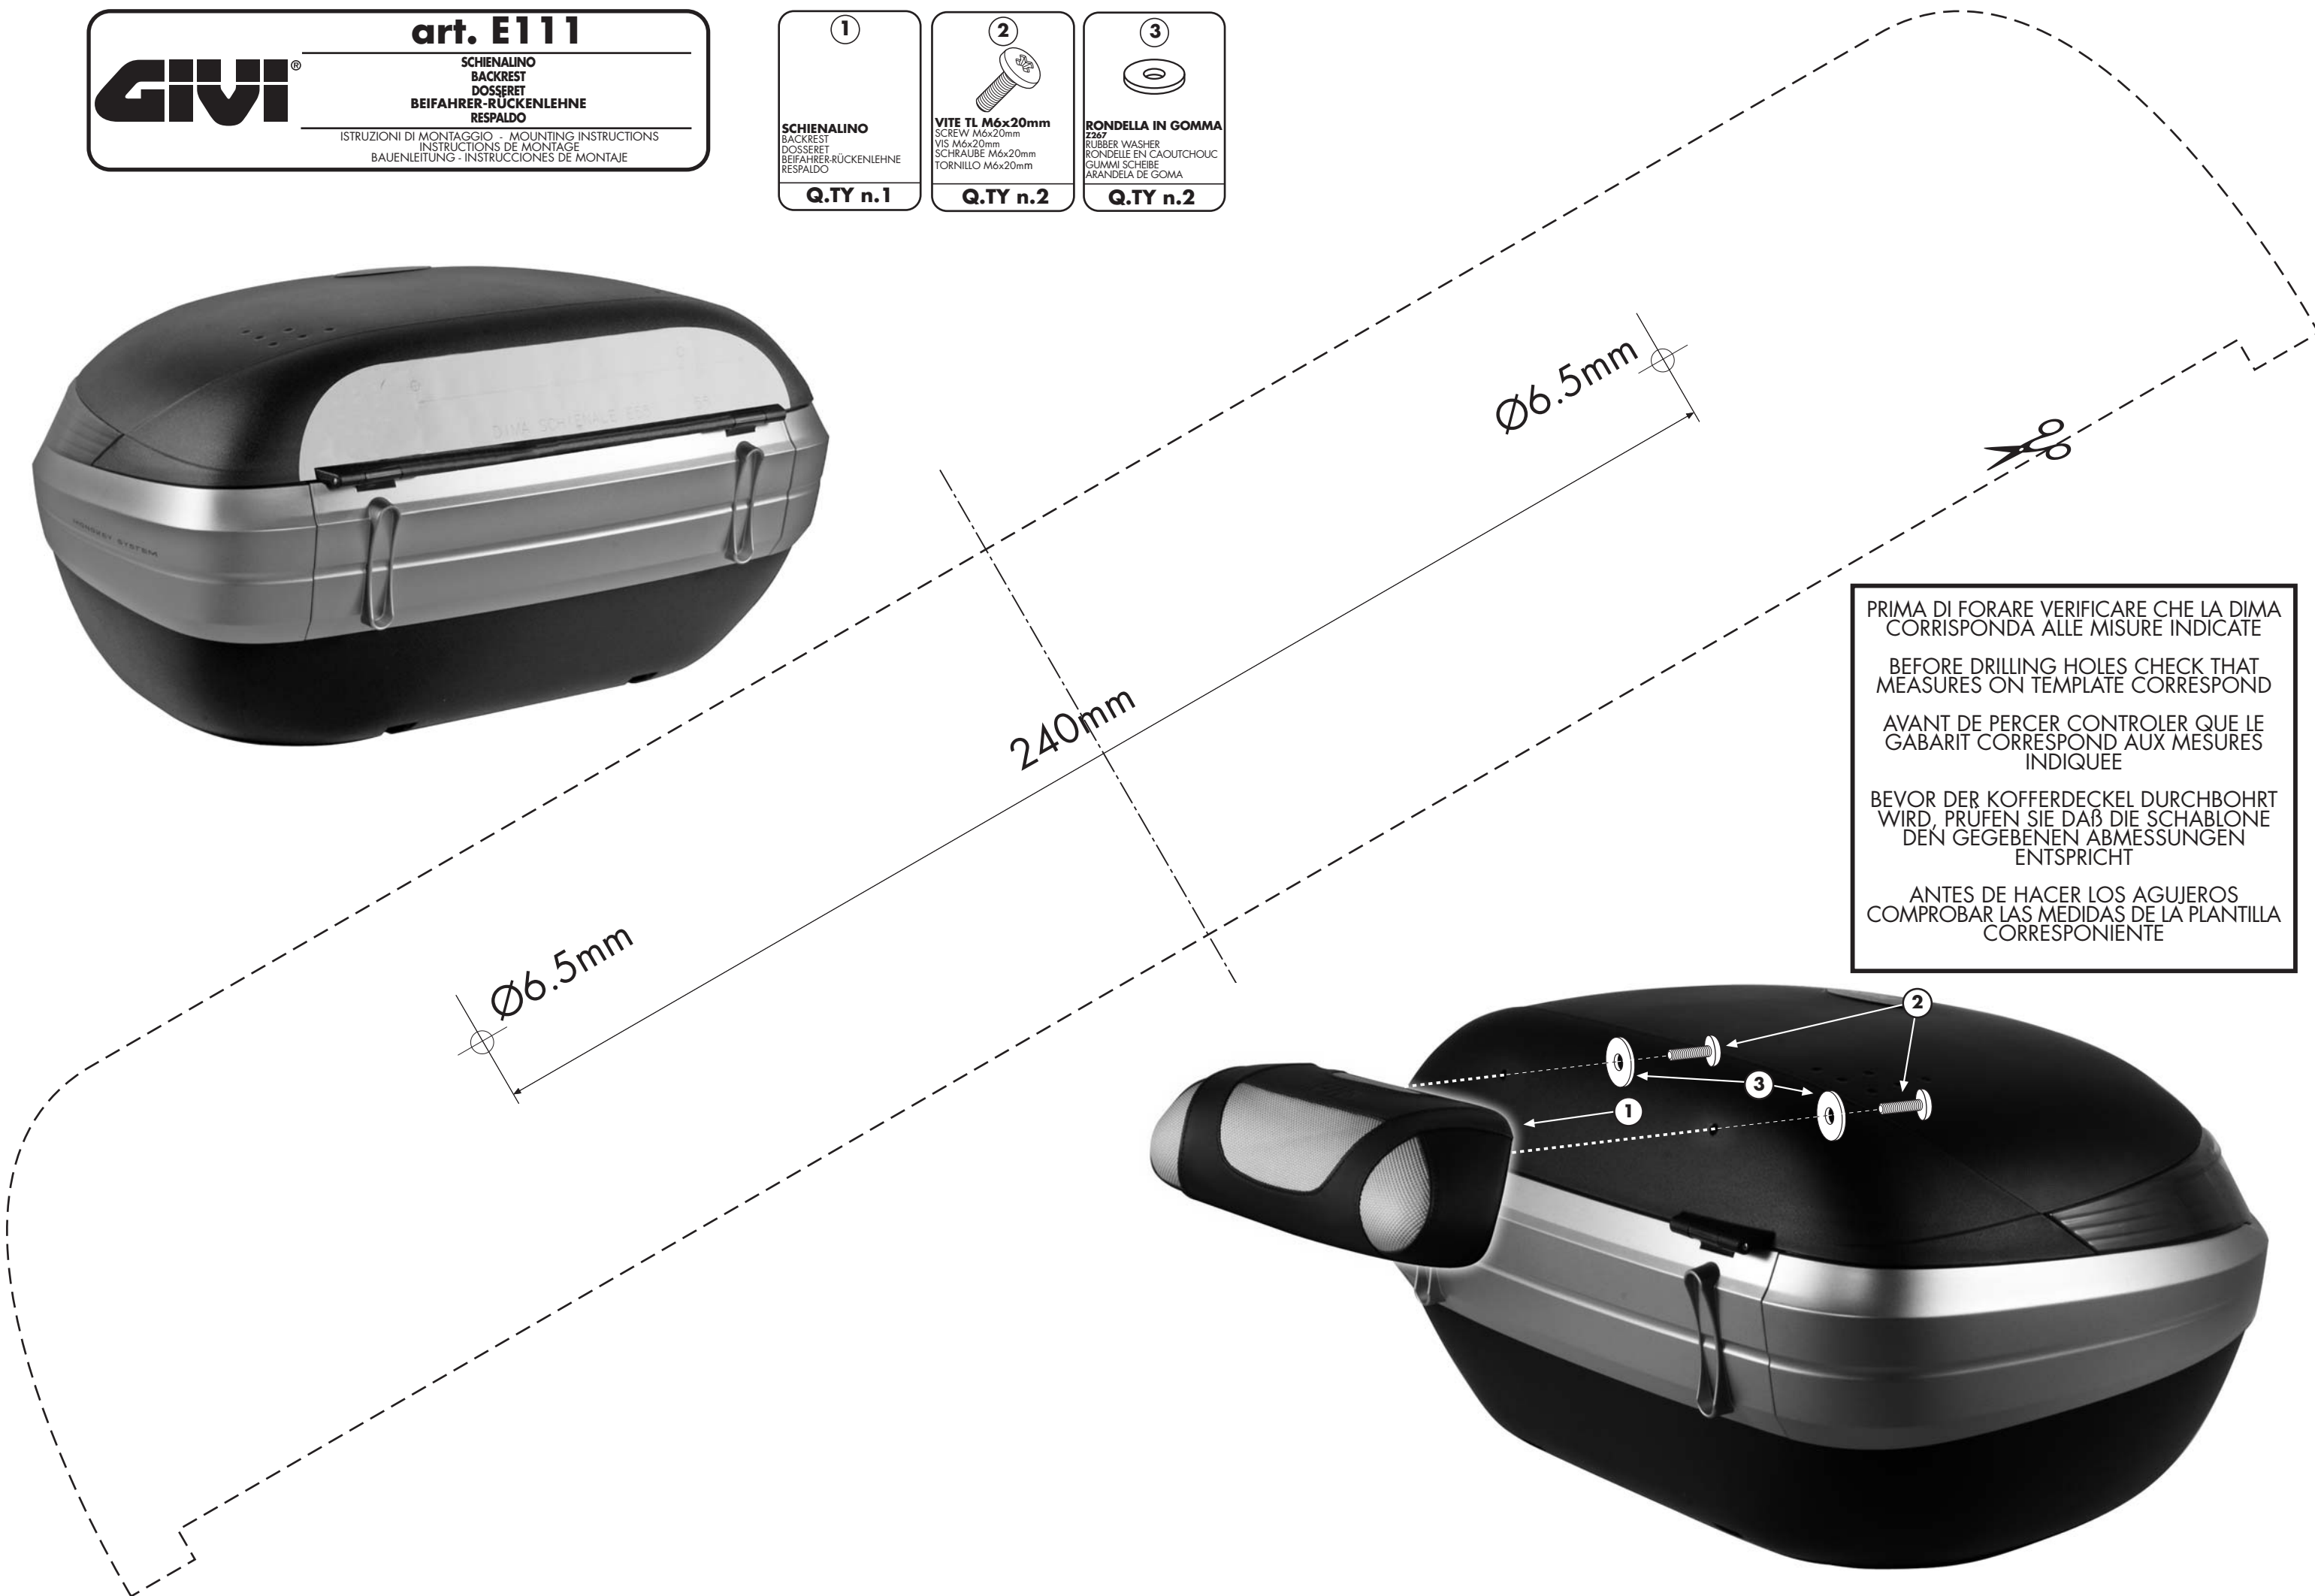

PRIMA DI FORARE VERIFICARE CHE LA DIMA  
CORRISPONDA ALLE MISURE INDICATE

BEFORE DRILLING HOLES CHECK THAT  
MEASURES ON TEMPLATE CORRESPOND

AVANT DE PERCER CONTROLER QUE LE  
GABARIT CORRESPOND AUX MESURES  
INDIQUEE

BEVOR DER KOFFERDECKEL DURCHBOHRT  
WIRD, PRUFEN SIE DAB DIE SCHABLONE  
DEN GEGEBENEN ABMESSUNGEN  
ENTSPRICHT

ANTES DE HACER LOS AGUJEROS  
COMPROBAR LAS MEDIDAS DE LA PLANTILLA  
CORRESPONIENTE

