

QUICK-LOCK EVO-Träger QUICK-LOCK EVO-Carrier

Montagehinweise

Fahren Sie nicht ohne Koffer mit montierten Seitenplatten. Wenn sie ohne Gepäck fahren, Seitenplatten demontieren.

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M8	23 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

Max. Zuladung 5 kg pro Koffer.
Höchstgeschwindigkeit mit montierten Koffern: 130 km/h.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

KFT.01.602.20000/B
Revision: 00

HONDA CB 600 Bj. '07 – HONDA CB 600 Bj. '07 –

Mounting Instructions

German safety regulations require that no metal edge with a radius of less than 2.5mm be exposed while driving a motorcycle. Because Quick-Lock sidecase racks have edges with a radius of less than 2.5mm, Quick-Lock sidecase racks should not be used when luggage is not attached to them.

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.


All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M8	23 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.


Max. Load 5 kg (11 lbs) per case.
Maximum speed with mounted cases:
130 km/h (80 mph).





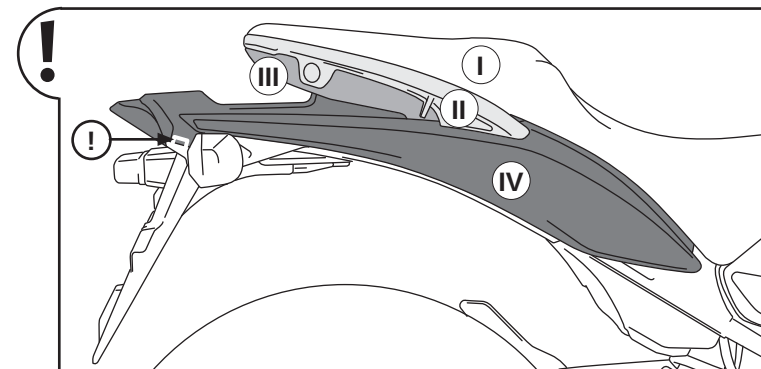


Achtung: Bei der Montage des Kofferträgers ist es notwendig, die Blinkerkabel beidseitig zu verlängern. Entfernen Sie dazu, wie in der oberen Zeichnung gezeigt, zunächst die **Sitzbank (I)**, dann die **Haltegriffe (II)** und anschließend die obere **Heckverkleidung (III)**. Entfernen Sie bei der **Heckverkleidung (IV)** zunächst die vorderen Schrauben und lösen dann den Clip (mit ! gekennzeichnet). Anschließen können die Kabel, wie in der **unteren Zeichnung** gezeigt, mit den beige-packten Kabeln (14) und Stoßverbindern (15) verlängert werden.


Die Demontage der einzelnen Segmente ist kompliziert und sollte bei Unsicherheit von einer HONDA-Fachwerkstatt vorgenommen werden.

Attention: if you mount the side carrier it is necessary to extent the blinker cable on both sides. First detach the **seat (I)**, then the **passenger grips (II)** and the upper cover **element (III)** as shown in the upper drawing. To remove the **rear cover (IV)** first detach the screws at front and then loosen the rear clip (marked with !). Now extend the cable with the cable extensions (14) and cable connectors (15) as shown in lower drawing. **The disassembling of the parts is complicated. If you are not sure how to do, consult your nearest HONDA-dealer.**

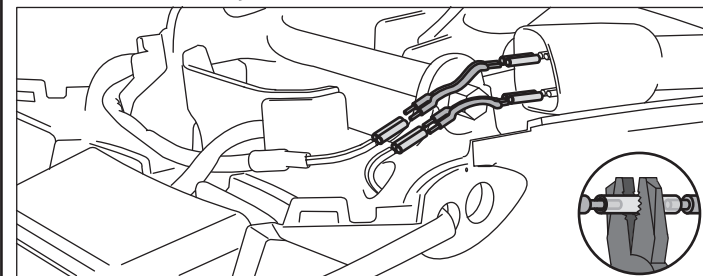

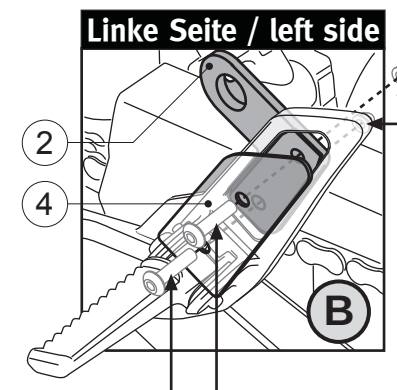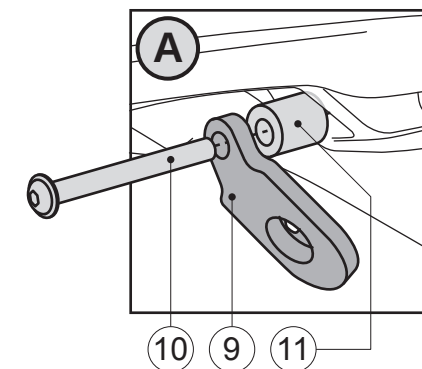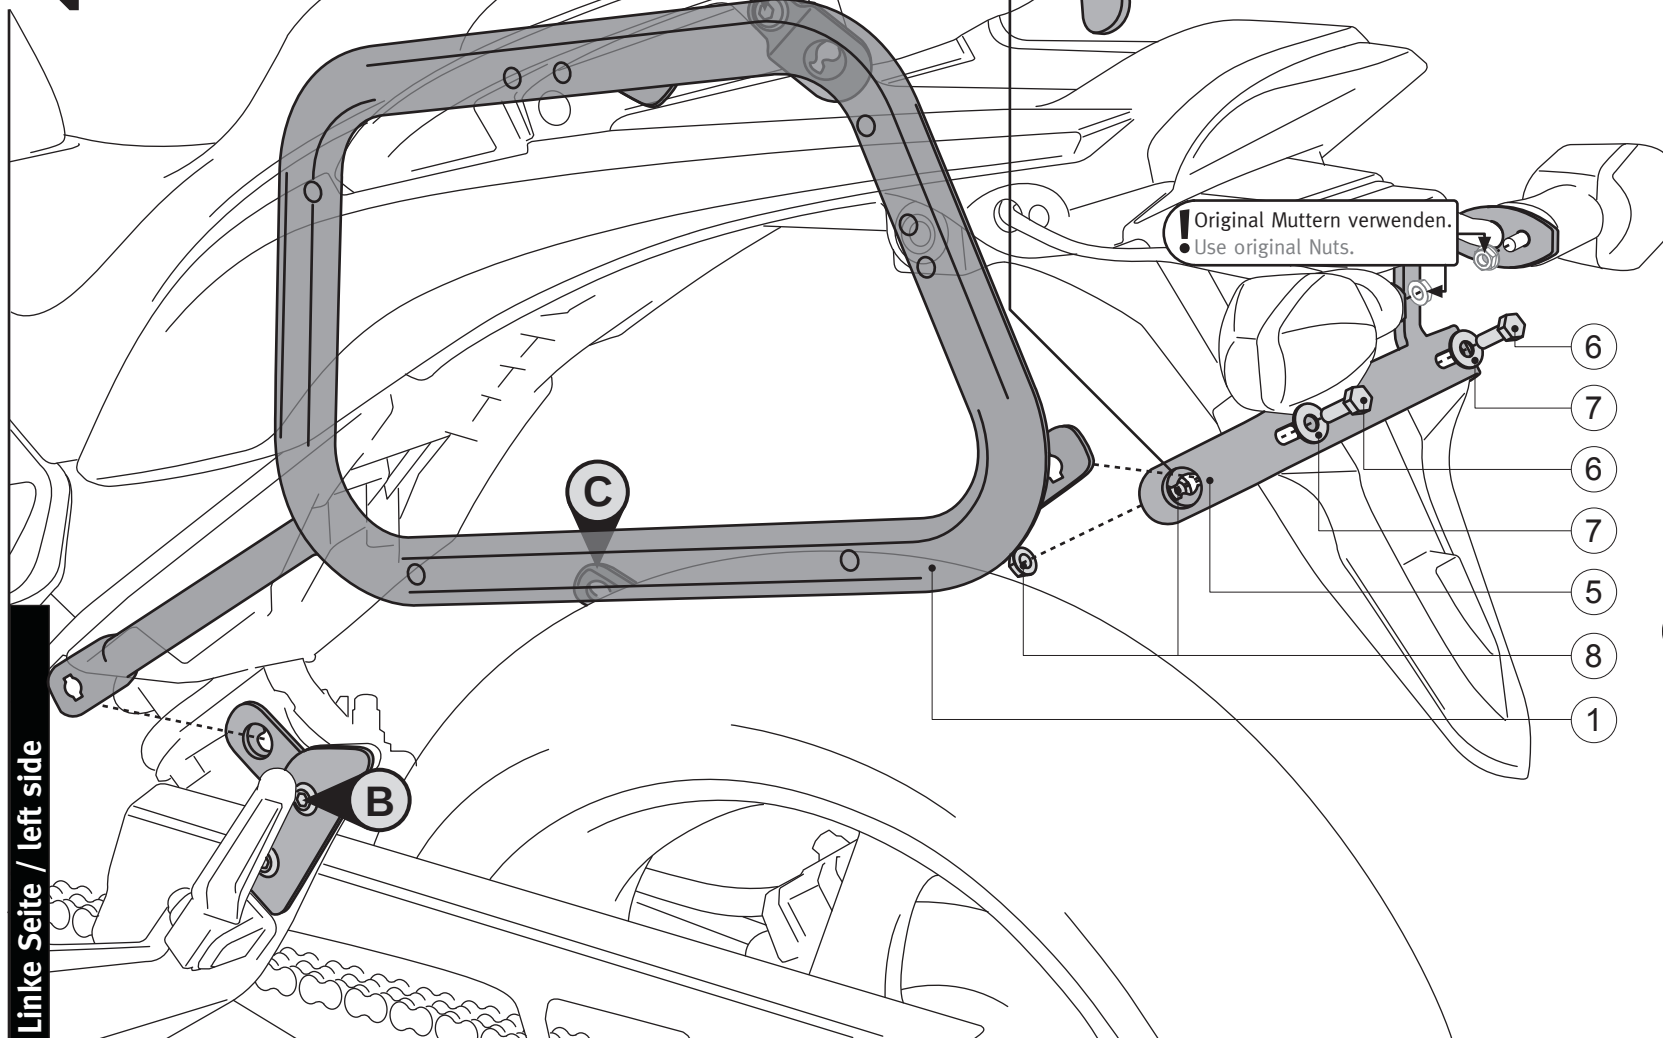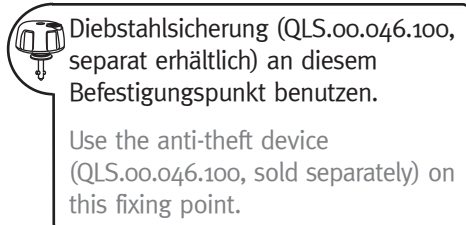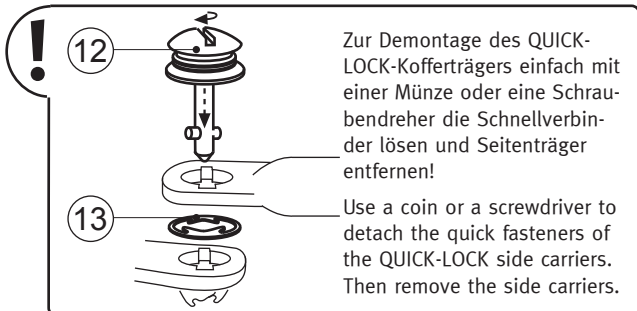

! Original Schrauben und Muttern verwenden.
Use original screws and nuts.

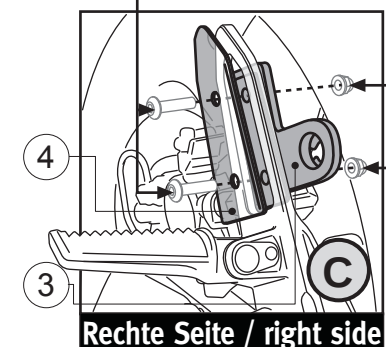

1 EVO-Träger
EVO-Carrier



KFT.01.602.961/962 00

Anzahl/ Pcs. 2 (L/R)

5 Querverbinder
Cross Girder



KFT.01.602.003 01

Anzahl/ Pcs. 1

9 Befestigungsblech
Fixing Lug



KFT.00.158.003 01

Anzahl/ Pcs. 2

12 Schnellverschluss
Quick Fastener



CAM.2312S21-12AHNV

Anzahl/ Pcs. 6

2 Befestigungsblech
linke Seite
Fixing Lug **left side**



KFT.01.065.001 03

Anzahl/ Pcs. 1 (L)

6 Sechskantschraube
Hexagon Screw



M6 x 20 DIN 933

Anzahl/ Pcs. 2

10 Linsenkopfschraube
Lenshead Screw



schwarz/black

M8 x 70 ISO 7380

Anzahl/ Pcs. 2

13 Sicherungsring
Retaining Ring



CAM.2312S10-1BP

Anzahl/ Pcs. 6

3 Befestigungsblech
rechte Seite
Fixing Lug **right side**



KFT.01.065.001 03

Anzahl/ Pcs. 1 (R)

7 Unterlegscheibe
Washer



A 6,4 DIN 9021

Anzahl/ Pcs. 2

11 Distanzbuchse
Spacer



Da:16 Di:8,4 h:18

Anzahl/ Pcs. 2

14 Kabelverlängerung,
2-polig, 1,5 mm²
Twin Cable Extension



(KAV-100/4)

Kabelverlängerung 150 mm

Anzahl/ Pcs. 2

4 Abdeckblech
Cover



KFT.01.602.001 00

Anzahl/ Pcs. 2 (L/R)

8 Mutter mit Bund,
selbstsichernd
Lock Nut with Flange



schwarz/black

M6 DIN 6927/b

Anzahl/ Pcs. 2

15 Kabelverbinder
Cable Connector



STV.00.025.RD

Anzahl/ Pcs. 8