



BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 670.600 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 670.664 schwarz

BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 4005.025.301 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 4005.030.301 schwarz

Montage

Der Bausatz umfaßt die folgenden Teile:

Stück	Bestellnr.	Bezeichnung
1	700007451	Gepäckplatte
1	700007452	Gummiträger
1	700007453	Rastwinkel
2	151.331	Senkschrauben M5 x 50
3	151.330	Senkschrauben M5 x 25
2	151.274	Senkschrauben M6 x 35
2	275001	Gummipuffer Ø20 x 5,5mm
2	150.799	selbstsichernde Mutter M6
5	270.111	selbstsichernde Mutter M5
4	151.283	Verschlußstopfen Ø8 mm
2	151.109	Distanzhülsen Ø17 x Ø 7 x 6 mm
2	151.319	Distanzhülsen Ø10 x Ø 6 x 33 mm (Stahl verzinkt)
1	150.728	Distanzhülse Ø13 x Ø 7 x 7 mm
2	150.821	Distanzhülsen Ø18 x Ø 9 x 18 mm
1		Dichtband 20x40 94 cm

Modell bis 2011



Modell ab 2012



Anzugsmomente des Motorradherstellers beachten!
Nach der Montage alle Verschraubungen auf festen Sitz kontrollieren!
Bitte beachten Sie unsere beigefügten Serviceinformationen.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 06331 - 1453 - 100
Fax: 06331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de



Krauser GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: 06331 - 1453 - 250
Fax: 06331 - 1453 - 260
eMail: vertrieb@krauser.de
www.krauser.de



BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 670.600 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 670.664 schwarz

BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 4005.025.301 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 4005.030.301 schwarz

Montage

Vorbereitung:



Schloss mit Halteplatte von Original Soziussitzbank demontieren. Die Originalschrauben entfallen. Falls man nicht das Schloss von der Sitzbank demontieren möchte, ist auch ein passend codiertes Schloss beim BMW-Händler erhältlich.

Die beiden Bohrungen in der Original - Riegelabdeckung (siehe **A**, Bild auf Seite 3) müssen auf mindestens 5mm aufgebohrt werden, damit die Schrauben M5 x 50 durchpassen.

Die 2 x Gummipuffer in den Gummiträger stecken.
Gummiträger fluchtend mit den Bohrungen auf die Gepäckplatte auflegen.

Montage des Rastwinkels vorne auf der Gepäckplatte:

Der Rastwinkel wird mit Distanzhülsen Ø18 x Ø 9 x 18mm, den Senkschrauben M6 x 35 und selbstsichernden Muttern M6 auf der Gepäckplatte vorne verschraubt.

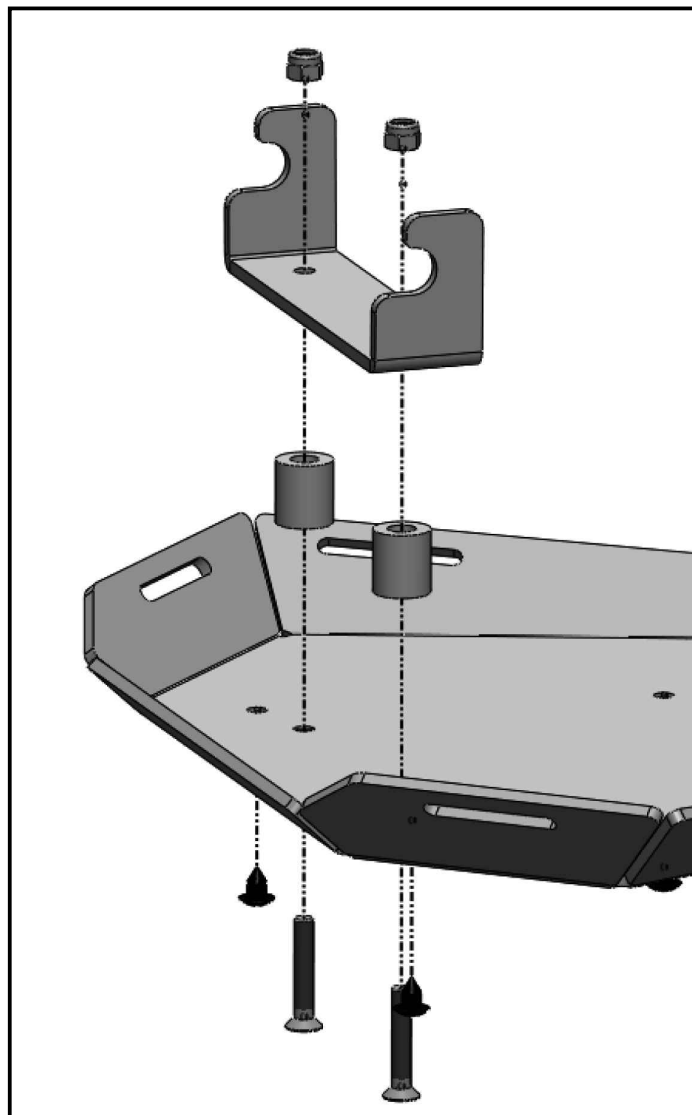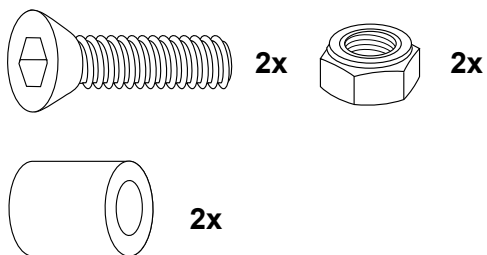



BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 670.600 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 670.664 schwarz

BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 4005.025.301 schwarz


BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 4005.030.301 schwarz

Montage


Montage des Schlosses hinten auf der Gepäckplatte:

Das Original - Schloss mit Halteplatte ① wird
vorne auf dem Gummiträger verschraubt.



② Vorne die Distanzhülsen $\varnothing 17 \times \varnothing 7 \times 6$ auflegen
und mit den Senkschrauben M5 x 25 und
selbstsichernden Mutter M5 verschrauben.



③ Mittig die Distanzhülsen $\varnothing 10 \times \varnothing 6 \times 33$ auflegen
und mit den Senkschrauben M5 x 50 mit selbst-
sichernden Mutter M5 verschrauben.




④ Hinten die Distanzhülse $\varnothing 13 \times \varnothing 7 \times 7$ mm
auflegen und mit einer Senkschraube M5 x 25 und
einer selbstsichernden Mutter M5 befestigen.



Die 4 nicht benutzten Bohrungen mit
Verschlußstopfen verschließen.

Die Befestigung des SPORTRACKS am Motorrad
erfolgt in der gleichen Weise wie beim Soziussitz.

Bitte vor dem Fahren den festen Sitz des
SPORTRACKS im Schloss kontrollieren.

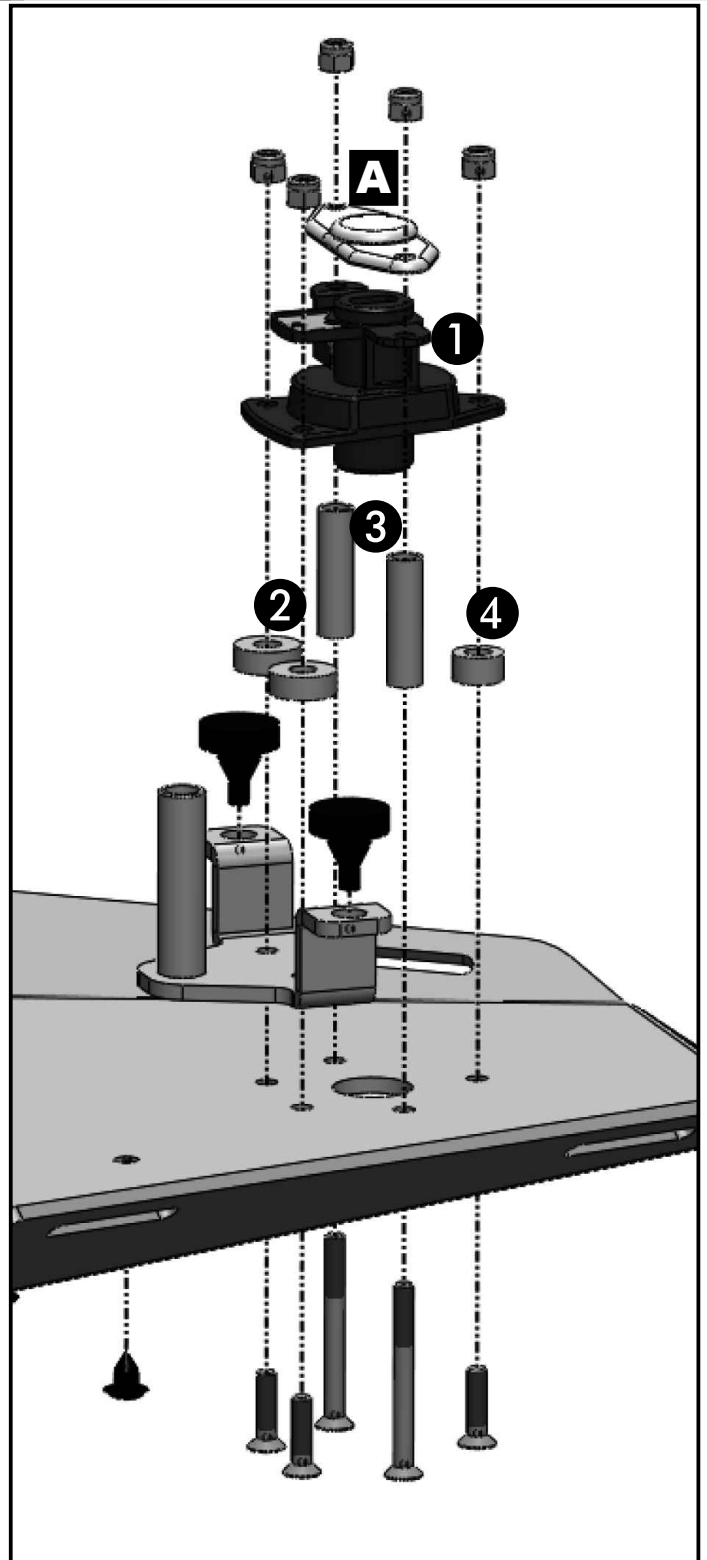



BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 670.600 schwarz


BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 670.664 schwarz

Montage

Anbringung des Dichtbandes:
dieses wird, wie gezeigt, auf der Rückseite der
Sportrackplatte aufgeklebt.

BMW S 1000 RR
bis Baujahr 2011
Art.-Nr.: 4005.025.301 schwarz

BMW S 1000 RR
ab Baujahr 2012
Art.-Nr.: 4005.030.301 schwarz

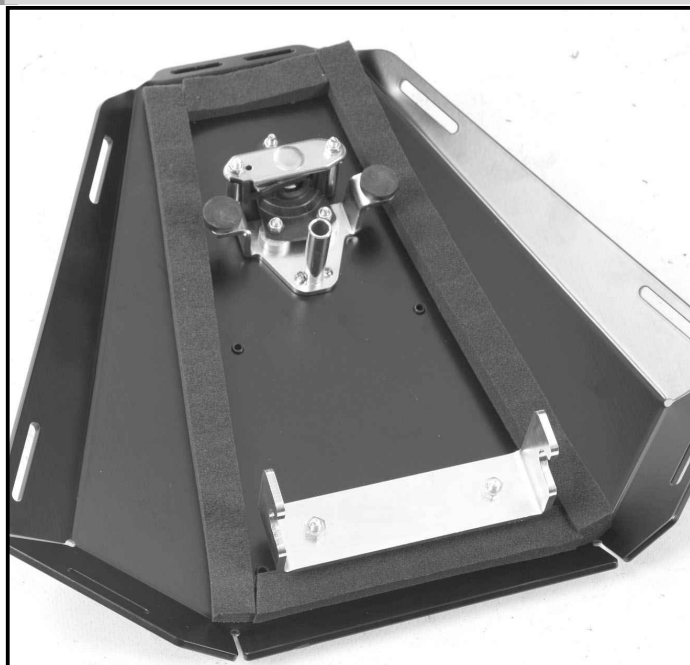



BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 670.600 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 670.664 black

BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 4005.025.301 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 4005.030.301 black

Assembling instructions

The kit includes the following parts:

Quant	item no.	description
1	700007451	sportrack plate
1	700007452	rubber carrier
1	700007453	holding plate
2	151.331	countersunk head screw M5 x 50
3	151.330	countersunk head screw M5 x 25
2	151.274	countersunk head screw M6 x 35
2	275001	rubber Ø20 x 5,5mm
2	150.799	self lock nuts M6
5	270.111	self lock nuts M5
4	151.283	plastic plug Ø8 mm
2	151.109	spacer Ø17 x Ø 7 x 6 mm
2	151.319	spacer Ø10 x Ø 6 x 33 mm (Steel)
1	150.728	spacer Ø13 x Ø 7 x 7 mm
2	150.821	spacer Ø18 x Ø 9 x 18 mm
1		Seal strip 94 cm

Model up to 2011



Model from 2012



Control all screw connections after the assembling for tightness!
Please notice our enclosed service information.



Hepco & Becker GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: +49 6331 - 1453 - 100
Fax: +49 6331 - 1453 - 120
eMail: vertrieb@hepco-becker.de
www.hepco-becker.de



Krauser GmbH
An der Steinmauer 6
D-66955 Pirmasens
Tel.: +49 6331 - 1453 - 250
Fax: +49 6331 - 1453 - 260
eMail: vertrieb@krauser.de
www.krauser.de



BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 670.600 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 670.664 black

BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 4005.025.301 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 4005.030.301 black

Assembling instructions

Preparing:

Dismantle pillion seat; dismantle the Original lid from the seat.

It is necessary, to bore the holes in the original lid cover to 5 mm diameter (refer to **A**, picture at page 3) to use the screws M5 x 50.



Mount rubbers to the rubber carrier.

Notice: to use both, the pillion seat or the Sportrack, another Original BMW lid is necessary. You can order this part from your BMW dealer.

Fastening of the holding plate at the front of the sportrack plate:

sandwich spacer Ø18 x Ø 9 x 18mm.

Fix the holding plate with countersunk head screws M6 x 35 and self lock nuts M6.

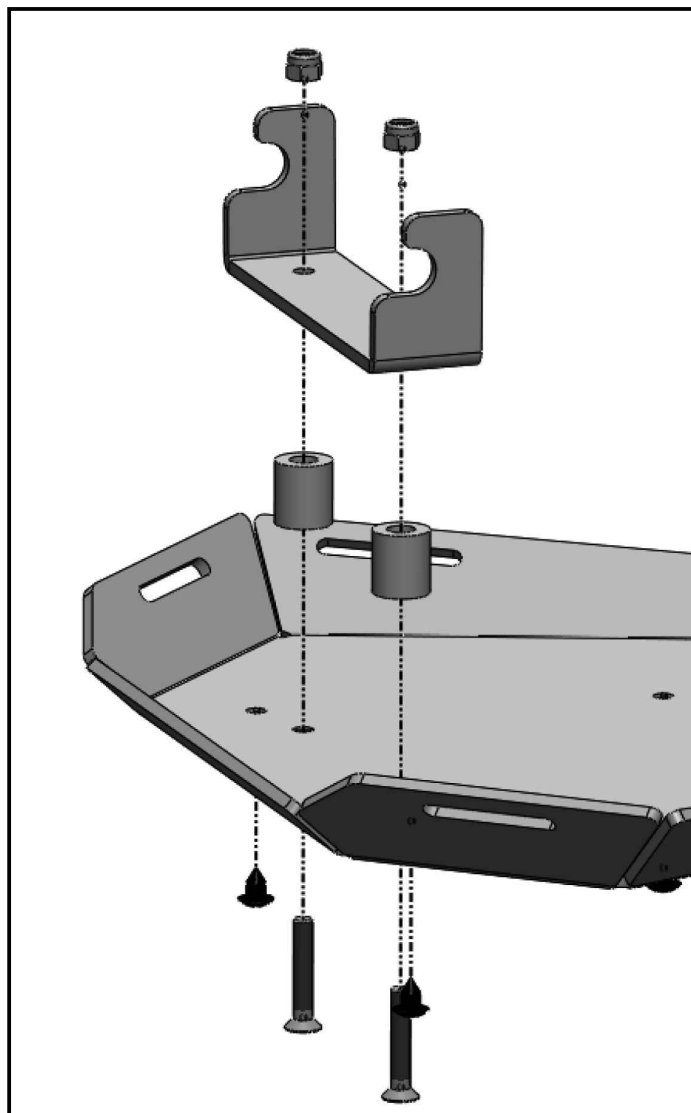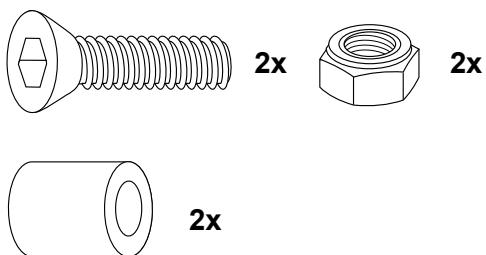



BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 670.600 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 670.664 black

BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 4005.025.301 black


BMW S 1000 RR
from date of manufacture 2012
Item - No.: 4005.030.301 black

Assembling instructions


Fastening of the lid at the rear side of the sportrack plate:

Fix the original lid ① with holding plate at the rubber carrier.



② Front: sandwich spacer $\varnothing 17 \times \varnothing 7 \times 6\text{mm}$.
Fix the lid with countersunk head screws M5 x 25 and self lock nuts M5.



③ Middle: sandwich spacer $\varnothing 10 \times \varnothing 6 \times 33\text{mm}$.
Fix the lid with countersunk head screws M5 x 50 and self lock nuts M5.




④ Rear: sandwich spacer $\varnothing 13 \times \varnothing 7 \times 7\text{mm}$.
Fix the lid with countersunk head screws M5 x 20 and self lock nuts M5.



Put the plastic plugs into the free borings.

Before driving, control the correct and locked position of the SPORTRACK in the lid of the pillion seat !

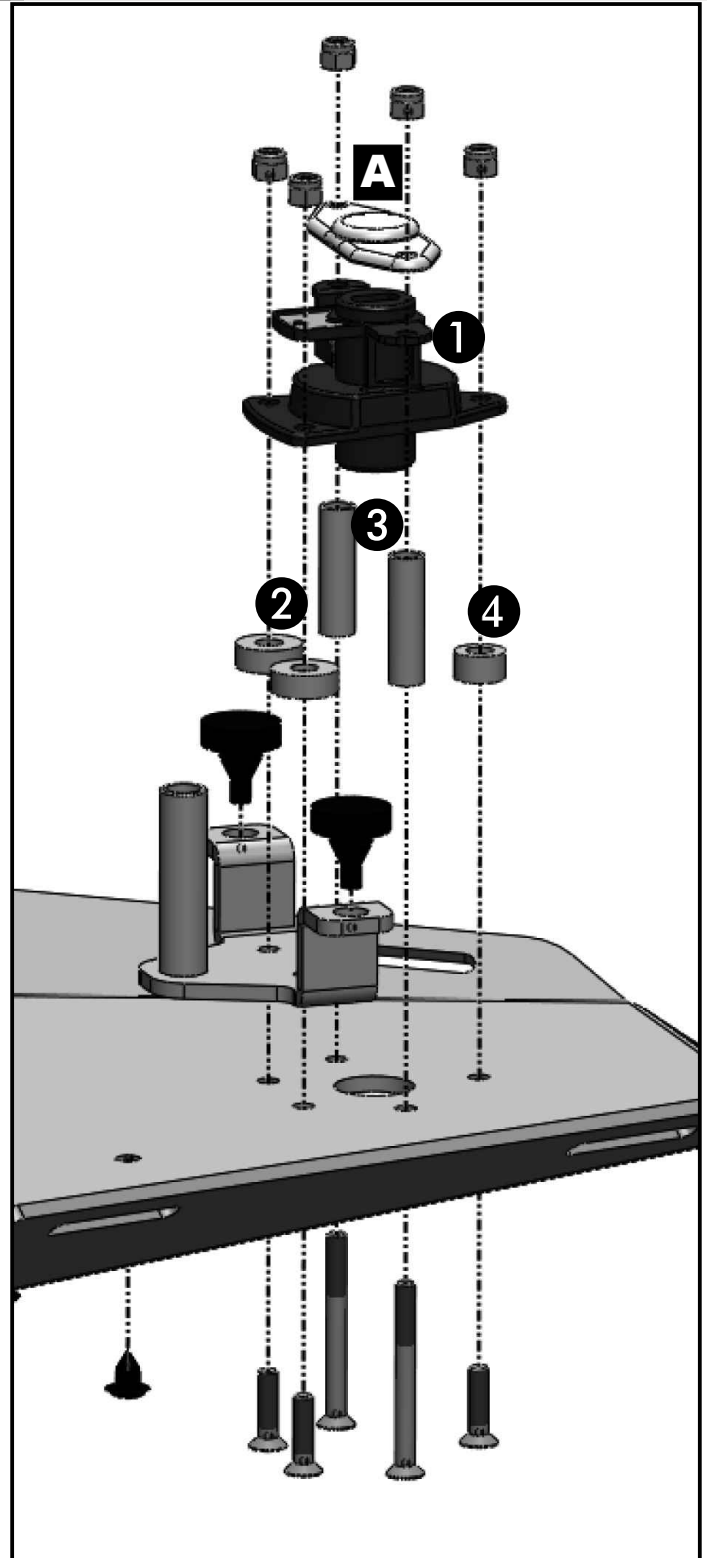



BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 670.600 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 670.664 black

BMW S 1000 RR
up to date of manufacture 2011
Item - No.: 4005.025.301 black

BMW S 1000 RR
from date of manufacture 2012
Item - No.: 4005.030.301 black

Assembling instructions

Affixing of the seal strip:
this will be stuck, as shown on the picture, to the back of the Sportrack plate.

