



Mounting the BR.7507

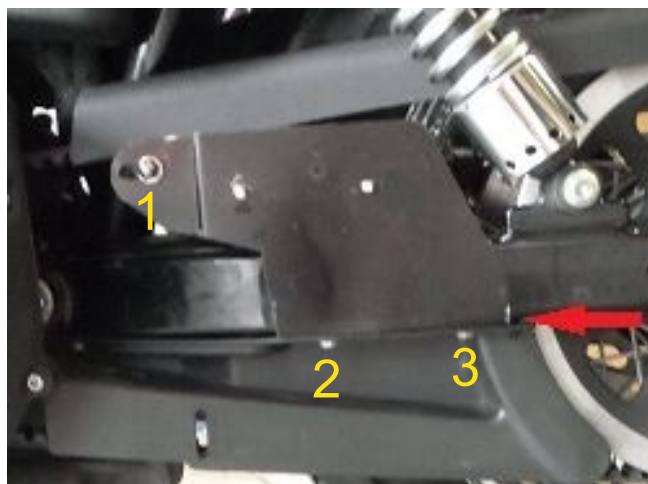

HOW TO FIT BR.7507 on DYNA , except LOWRIDER

- 1: Remove the footrest.
- 2: Fix the bracket on the positions 1, 2 & 3 (swingarm and belt case).
- 3: Hold the Longride bag in front of the bracket and mark the positions to drill the holes on the backside of the bag.
- 4: Drill the 2 holes diam 6.5mm through the backplate.
- 5: Fix the bag with the delivered bolts.

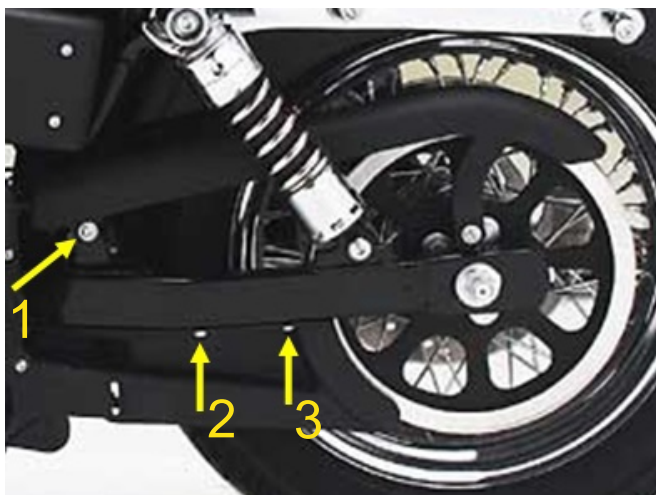

BR.7507