

CARENABRÍS PARA - WINDSHIELD FOR - WINDSCHUTZSCHEIBE FÜR KAWASAKI Z650

Ref.: 9588
(Mod. SPORT)



Ref.: 9369
(Mod. TOURING)















Mod. SPORT




Mod. TOURING



 1 persona 1 person	 15 min	Fácil - Easy Media-Intermediate Difficil-Difficult	 ALLEN Nº 3 Nº 4
--	---	--	--

ID.	PIEZA/PART	DESCRIP.	QTY.
1		Carenabrís SPORT SPORT windshield (Ref. 9588)	1
		Carenabrís TOURING TOURING windshield (Ref. 9369)	
2		SopORTE metálico derecho Right metal support	1
3		SopORTE metálico izquierdo Left metal support	1
4		Tornillo Allen M5x16 Ø11 ISO 7380 M5x16 Ø11 ISO 7380 Allen screw	4
5		Silentblock M5 M5 Silentblock	4
6		Arandela de nylon M5x0,5 M5x0,5 nylon washer	4
7		Arandela de nylon Ø6.2xØ12x3mm Ø6.2xØ12x3mm nylon washer	4
8		Tapón tornillo M5 ISO 7380 M5 ISO 7380 screw cap	4

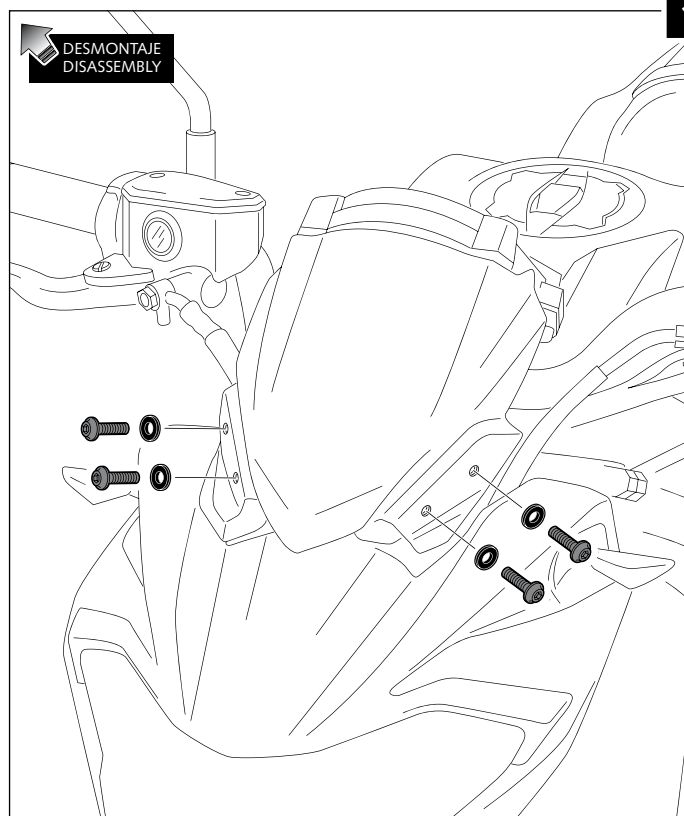

CARENABRÍS PARA - WINDSHIELD FOR - WINDSCHUTZSCHEIBE FÜR
KAWASAKI Z650

INSTRUCCIONES DE MONTAJE - MOUNTING INSTRUCTIONS - MONTAGEANLEITUNG

