

Sturzpad-Kit TRIUMPH Speed Triple 1050 '08 –
Frame Slider Kit TRIUMPH Speed Triple 1050 '08 –

Montagehinweise

Alle vom Motorrad gelösten Schrauben sind gemäß Herstellerangaben wieder zu montieren, oder mit von SW-MOTECH gelieferten Schrauben zu ersetzen. Falls nicht anderweitig definiert, diese Schrauben nach Tabelle anziehen.

M6	9,6 Nm
M12	79 Nm

Gegebenenfalls Schrauben mit flüssiger Schraubensicherung einkleben.

Prüfen Sie nach 50 km alle Verbindungen auf festen Sitz.

SW-MOTECH GmbH & Co. KG
Ernteweg 8/10
35282 Rauschenberg
Germany

Tel. +49 (0) 64 25/8 16 8-00
Fax +49 (0) 64 25/8 16 8-10

info@sw-motech.com
www.sw-motech.com

Mounting Instructions

SW-MOTECH products should be installed by a qualified, experienced motorcycle technician. If you are unsure of your ability to properly install a product, please have the product installed by your local motorcycle dealer. SW Motech takes no responsibility for damages caused by improper installation.

All screws, bolts and nuts, including all replacement hardware provided by SW-MOTECH, should be tightened to the torque specified in the OEM maintenance manual for your motorcycle. If no torque specifications are provided in the OEM maintenance manual, the following torques may be used:

M6	9,6 Nm
M12	79 Nm

All screws, bolts and nuts should be checked after driving the first 50 km to ensure that all are tightened to the proper torque.

Medium strength liquid thread-locker (i.e., "Locktite") should be used to secure all screws, bolts and nuts.

1 Sturzpad
Frame Slider



STP.00.590.001 **01**
Anzahl/ Pcs. 2

2 Logoplatte
Logo Plate



LOG.00.000.001 **01**
Anzahl/ Pcs. 2

3 Senkkopfschraube
Countersunk Screw



M3 x 12 DIN 7991
Anzahl/ Pcs. 4

STP.00.590.10000/B

4 Anbaublech
Mounting Bracket



STP.11.590.003 **00**
Anzahl/ Pcs. 2

5 Innensechskant-
schraube
Hexagon Socket Screw



FEINGEWINDE
rechte Seite/right side
M12 x 1,25 x 60 DIN 912
Anzahl/ Pcs. 1

6 Innensechskant-
schraube
Hexagon Socket Screw



FEINGEWINDE
rechte Seite/right side
M12 x 1,25 x 100 DIN 912
Anzahl/ Pcs. 1

7 Distanzbuchse
Spacer



rechte Seite/right side
Da:25 Di:12,5 h:30
Anzahl/ Pcs. 1

8 Unterlegscheibe
Washer



A 13 DIN 125
Anzahl/ Pcs. 4

9 Innensechskant-
schraube
Hexagon Socket Screw



FEINGEWINDE
linke Seite/left side
M12 x 1,25 x 35 DIN 912
Anzahl/ Pcs. 1

10 Innensechskant-
schraube
Hexagon Socket Screw



FEINGEWINDE
linke Seite/left side
M12 x 1,25 x 80 DIN 912
Anzahl/ Pcs. 1

11 Distanzbuchse
Spacer



linke Seite/left side
Da:20 Di:12,5 h:10
Anzahl/ Pcs. 1

12 Adapterplatte
Adapter Plate




STP.00.590.007 **00**
Anzahl/ Pcs. 2

13 Innensechskant-
schraube
Hexagon Socket Screw



M6 x 40 DIN 912
Anzahl/ Pcs. 4

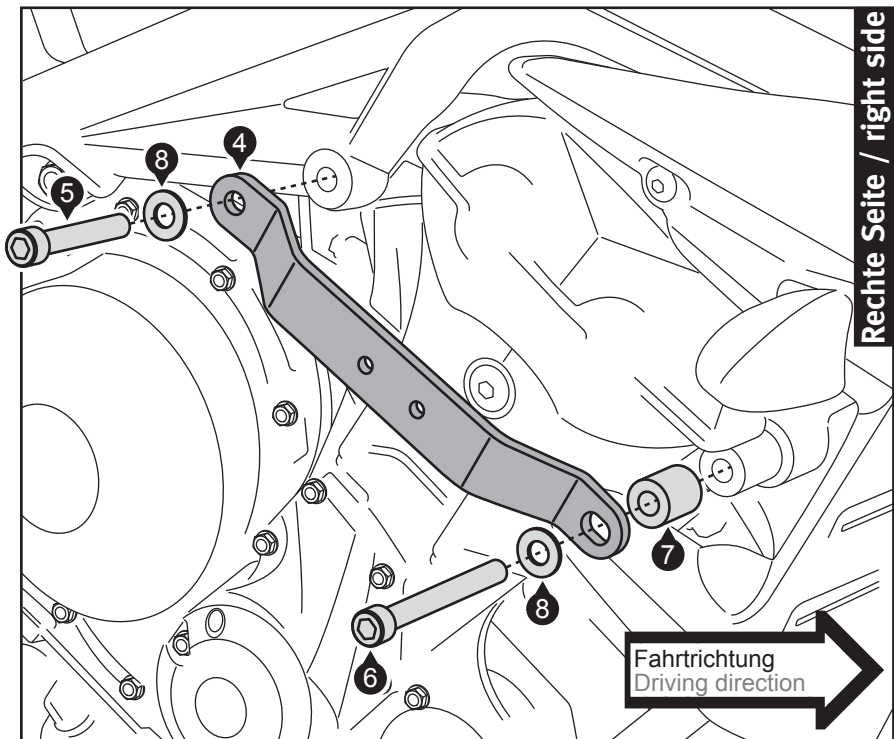


Schritt
Step 1

INFORMATION

Verschrauben Sie Anbaublech (4) zunächst auf der rechten Fahrzeugseite, wie in **Schritt 1** gezeigt. Ziehen Sie alle Schraube an. Achten Sie dabei auf das vom Hersteller vorgeschriebene Anzugsmoment.

Führen Sie nun den Montageschritt auch auf der linken Fahrzeugseite durch. Benutzen Sie die für diese Seite vorgesehen Teile (siehe Stückliste) analog zur rechten Seite. Verschrauben Sie nun die restlichen Teile, wie in **Schritt 2** dargestellt.

Fasten the mounting bracket (4) first on the right side of the motorcycle, as shown in **step 1**. Then tighten all screws. Pay attention to the manufacturer's specified torque. Now attach the mounting bracket (4) at the left side, following the same procedure. Make sure to use the appropriate (left/right) parts for each side. Then attach the parts shown in **step 2**.

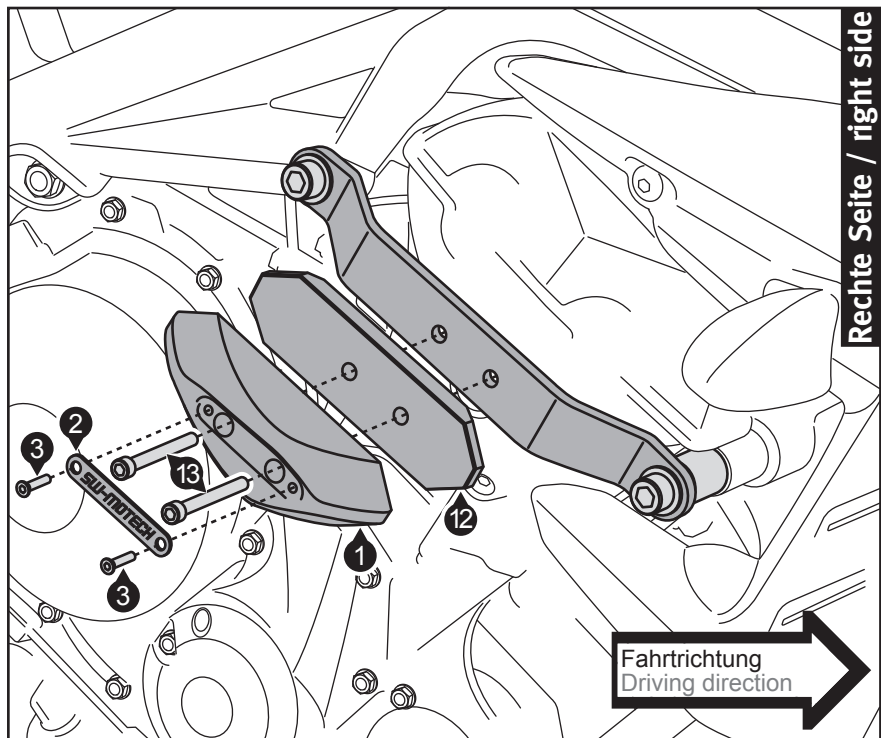

Schritt
Step 2