


Universal throttle twistgrip Order no. 10019604

Dear Customer, Thank you for placing your trust in our product. Please use these instructions when mounting the product. The Louis Team wishes you lots of fun.

The universal throttle twistgrip with replaceable throttle cable mount is suitable for a range of bikes with 22 mm handlebars and can be used to mount accessory grips or replace a defective throttle twistgrip.

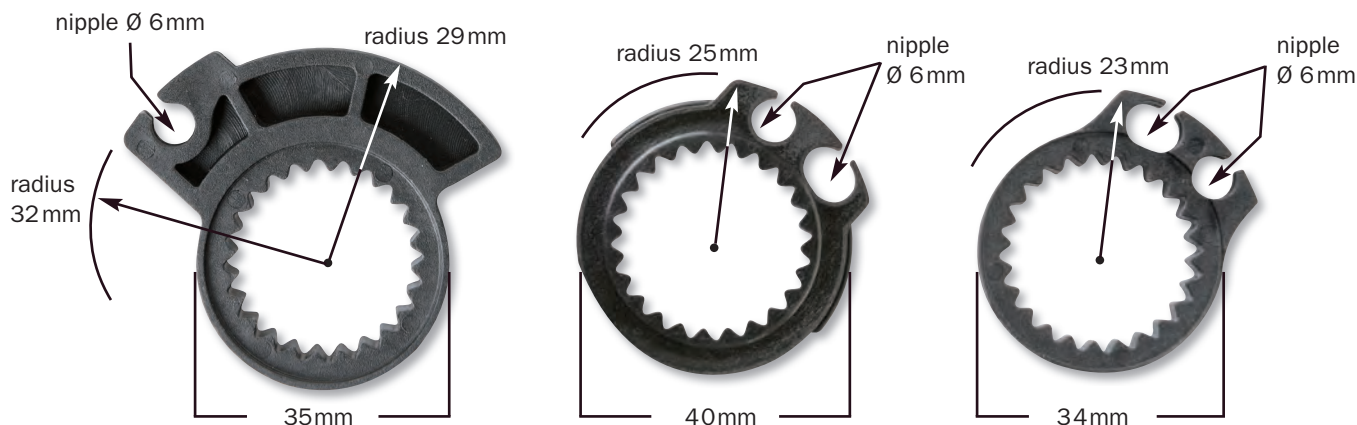

All mounts for 1.5 mm Bowden cables!

Installation:

First of all, use the dimensions specified above to check whether the throttle twistgrip is suitable for your controls – there must be enough space for the high collar and the detachable throttle cable mount in the instrument housing, whilst the Bowden cable nipples must also fit in the holder. To do so, you must unscrew the housing of the throttle twistgrip and measure/take a close look at the original twistgrip.

If, in your opinion, the universal throttle twistgrip is suitable for the motorcycle, rotate the Bowden cable adjuster(s) of the throttle cables on the controls backwards a little and unhook the cables to enable you to remove the original twistgrip from the handlebar. Wipe off any old grease from the handlebar.

Put the selected throttle cable mount on the new throttle twistgrip and carefully carry out a trial installation of the twistgrip in your throttle grip sleeve. In doing so, check the following:

- Do the Bowden cable nipples fit perfectly and securely in the mount?
- Does the twistgrip fit in the instrument housing?
- Can it be rotated freely when the housing is closed and screwed together?

The throttle must not jam under any circumstances – this would jeopardise the safety of the rider and other road users! It must rotate smoothly without jamming in any way and the grip must be able to reset itself when you release it!

If correct functioning is assured, remove the throttle twistgrip from the housing once more and permanently glue the throttle cable mount onto the twistgrip with a few drops of superglue (e.g. PROCYCLE superglue Order no. 10004857). In doing so, please ensure that the throttle twistgrip and the adapter are free from grease. Afterwards, grease your handlebar and the throttle cable mount afresh, so that the throttle glides properly over the long-term. Put the throttle twistgrip on the handlebar and engage the throttle cables. Check once more that the throttle cables are routed correctly and that the nipples are suspended securely in the mounts. If you find signs of wear on the throttle cables, these should be replaced. Set the throttle cable adjuster on the controls so that the throttle cable has a little play (even when the steering is at full lock). The throttle cable must not be kept continuously under tension under any circumstances. Then close the housing and tighten the screws. To conclude the installation, test the throttle twistgrip to make sure it functions perfectly and smoothly.



If you have any questions about the product or these instructions, for prompt assistance please contact our Technical Centre by fax on +49 (40) 734 193-58, or by e-mail at technikcenter@louis.de

We will be pleased to provide prompt assistance. This is the best way to ensure that your product is installed properly and used correctly.